


#2580 Monaco Wall Fountain

Items Required For Assembly

Submersible Pump (not provided)
2" of 1/2" ID Vinyl Tubing (provided)

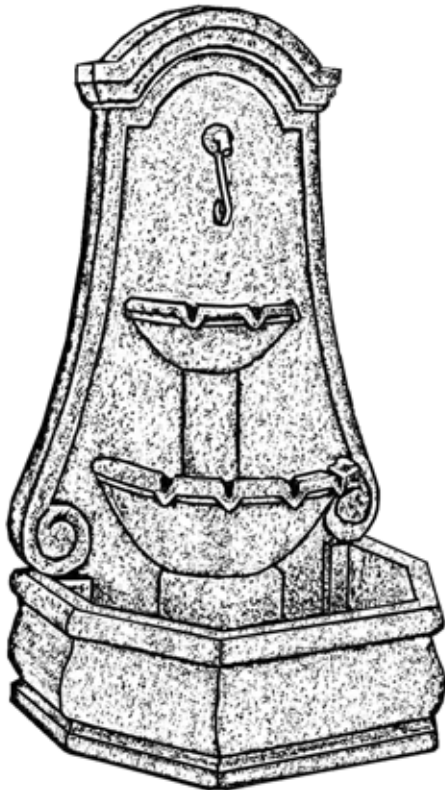

- 1) Place the bowl (A) on a firm, level surface.
- 2) Place the pump into the back of the bowl. Drape the electrical cord of the pump over the back rim of the bowl where the groove is located.
- 3) Place the fountain back(B) into the back of the bowl(A) so that it sits between the back side of the bowl and the support flanges located at the bottom of the bowl. The pump should sit in the cutout at the bottom of the fountain back (B).
- 4) Slip one end of the 1/2" ID Vinyl Tubing over the outlet of the pump and the other end over the copper tubing protruding from the top of the cutout at the bottom of the fountain back (B). Make sure the tubing is not kinked as this will impede the water flow. You may cut the vinyl tubing to size if necessary.
- 5) Fill the fountain with water making sure that the pump is completely submerged.
- 6) Plug the pump into a GFCI protected outlet. Adjust the water flow as necessary using the adjustment control on the pump.
- 7) Place the pumphouse (C) over the pump so that it hides the pump and sits under the large basin on the fountain back (B) and enjoy your new fountain.

